 
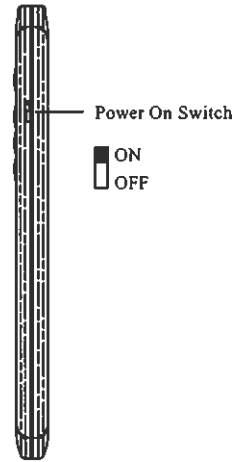 
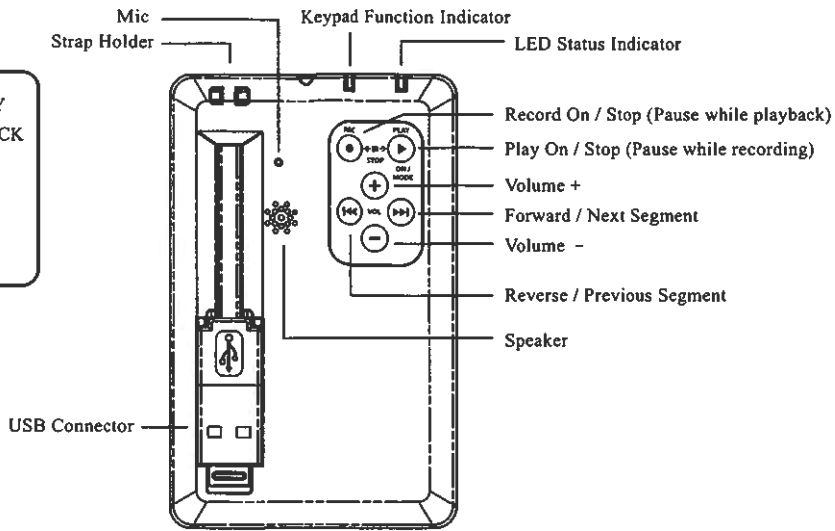 


Instruction Manual

LED Status Indicator

1. Steady RED → Recording Mode STANDBY
2. Flashing ORANGE → Recording PLAYBACK
3. Flashing RED → Recording
4. Steady GREEN → Music Mode STANDBY
5. Flashing GREEN → Music PLAYBACK
6. Plashing RED & ORANGE → low battery



Operation

Note: Before use, make sure Power On Switch is at ON position!

Switching ON:

Press "PLAY" to power on. 2 LED indicators, RED and ORANGE, will light simultaneously for 1.5 seconds. Power saving function will be activated when on standby for 60 seconds. Unit will switch off automatically.

Recording/Stop:

To Record, press "REC". Recording starts when RED LED is flashing.
To Stop Recording, press "REC" again and recording will stop immediately. RED LED will stop flashing.
To Pause Recording, press "PLAY" to pause it, And then press "PLAY" again to resume.

Recording Playback/Stop:

To Playback recording, press "PLAY" button to play recorded content. ORANGE LED will flash.
To STOP Playback, press "PLAY" button again. RED LED will light steadily.
To Pause playback press "REC" to pause it, And then press "REC" again to resume. (ORANGE LED will flash quickly)

Volume button + / -

Volume Up: Press "VOL +" key to increase volume. (Please control volume to prevent hearing injury.)
Volume Down: Press "VOL -" key to decrease volume.

Song selection:

Forward / NEXT Segment: Press >> key to select next song.
Reverse / LAST Segment: Press << key to select last song.

Operation of MP3:

Under Standby mode, press "PLAY" button for 1.5 seconds to switch to MP3 mode. LED light will turn from RED to Green.

Playback/Stop:

To Playback Music, Press "PLAY" button to play music content. GREEN LED light will flash.
To Stop Playback Music, Press "PLAY" button again. GREEN LED indicator will light steadily.

REMARK

1. The unit need not be turned off during normal use. When the unit will not be used for a prolonged period of time (like 1 month), switch off the power to avoid battery damage or deterioration. The battery is a consumable item not covered by the manufacturer's warranty conditions.
2. Avoid charging over 24 hours, as overcharging might cause battery damage or deterioration.

- * For first time use, please charge up to 8 hours.
- * Specifications in this manual are subject to change without prior notice.

Frequently Asked Questions:

1. Unit does not turn on?
 - Check if the Power On switch is turned on. Switch is located on the upper right side of the unit.
 - Check if battery if battery is drained. Plug to a PC's USB port to recharge.
2. Cannot record?
 - Check if memory is full. Access the memory from a PC and remove files.